

SOLVIL_{ET}TITUS

Instruction Manual

Contents


	Page
Important	1-2
Display and Buttons	3
Setting the Time	4
Setting the Date	5
Using the Chronograph	6

Important

- Push buttons are not to be operated under water.
- If watch contains electronic components, never attempt to open the case or remove the back cover.
- Should water or condensation appear in the watch, have the watch checked immediately, corrosion of electronic parts can occur inside the case.
- Avoid exposing the watch to extreme temperature.
- Avoid severe impact. The watch is designed to withstand impact under normal use. It is inadvisable to subject it to severe impact or rough usage.
- Clean the watch with soft cloth and clean water only. Avoid using chemicals – especially soap as the waterproof gasket will corrode.
- Keep watch away from the conditions of strong electric field and static electricity.
- Replace battery by authorized service centre. Otherwise, the water resistance function may be affected.
- If watches are fitted with resin straps, you may notice a whitish powdery substance on the band. This substance will not harm your skin or clothing, and can be removed by simply wiping it with a cloth.

- For watches with light colour and transparent straps, there may be colour change on the strap after wear for some time.
- Calendar position may vary, depending on design. But the functions and setting are the same.

Display and Buttons

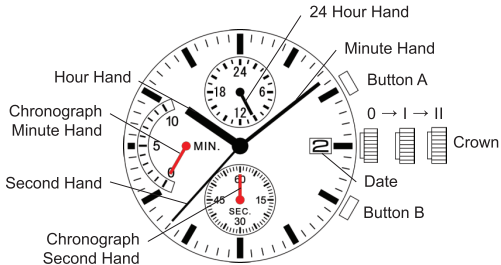

Setting the Time

1. Pull out the crown to the position II when the second hand is at the 12 o'clock. It will stop on the spot and advance the hour and minute hands by turning the crown.
2. Push the crown back to normal position (position 0) after setting.

Please note:

- * Please make sure you have correctly set AM/PM before you start to adjust the time.
- * When the crown is at the position II, do not press any button. Otherwise, the Chronograph hands will move.

Setting the Date

1. Pull the crown out to the position I.
2. Turn the crown to set the date.
3. Push the crown back to the position 0 after setting.

Please note:

- * Do not set the date and day of week between 9 PM and 1 AM. Otherwise, the date and day of week may not change properly. If it is necessary to set during that time period, first change the time to any time outside it, set the date and day of week, then reset the correct time.

Using the Chronograph

The Chronograph can measure up to 9 minutes 59 seconds.

Standard Measurement:

START (Button A) > STOP - Finish (Button A) > RESET to "0'00" (Button B)

Accumulated elapsed time measurement:

START - Start of game (Button A) > STOP - Time out (Button A) > RESTART – Restart of game (Button A) > STOP - Game Over (Button A) > RESET to "0'00" (Button B)

Split time measurement:

START (Button A) > SPLIT (Button B) / SPLIT RELEASE (Button B) > STOP - Finish (Button A) > RESET to "0'00" (Button B)

Please note:

- * Restart and stop of the chronograph can be repeated as many times as necessary by pressing button A.
- * Measurement and release of the split time can be repeated as many times as necessary by pressing button B.